

# ***SENSALERT PLUS***<sup>®</sup>

Relay Board

User Manual

Document No. 360-0109-01  
(Revision B)


***SENSIDYNE***<sup>®</sup>

Sensidyne, LP  
1000 112<sup>th</sup> Circle N, Suite 100  
St. Petersburg, Florida 33716 USA  
800-451-9444 • +1 727-530-3602 • +1 727-539-0550 [fax]  
**web:** [www.sensidyne.com](http://www.sensidyne.com) • **e-mail:** [info@sensidyne.com](mailto:info@sensidyne.com)


## • Field Installation Kit

1. If you have ordered the field install kit p/n 821-0219-02, you will need to install the RELAY Card into your SensAlert Plus transmitter as follows.

Disconnect Power.

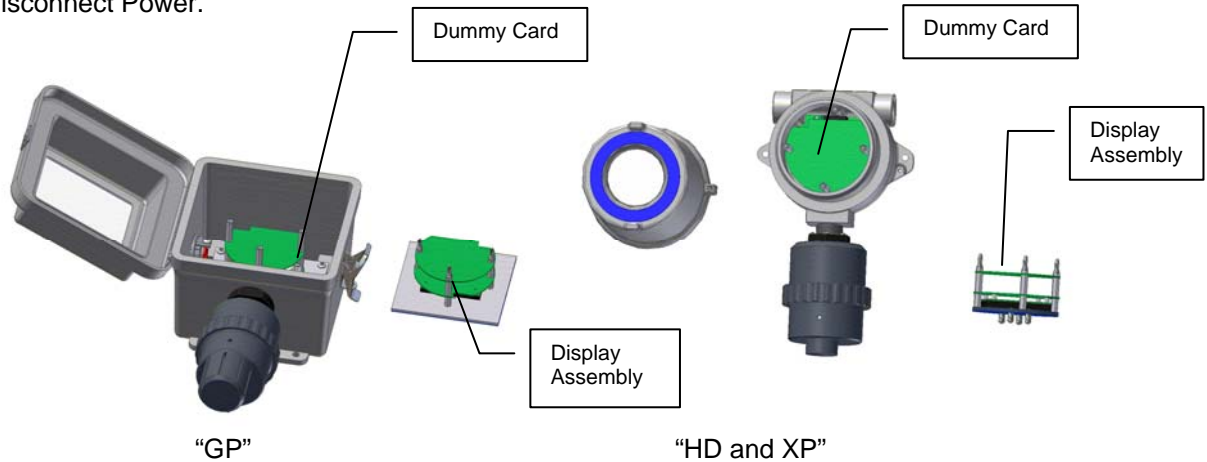


2. Open or Unscrew cover –(Note: On the “HD and XP” Option when doing more than one transmitter, keep cover and transmitter Body as a matched set).
3. Gently unplug the Display Assembly and place it face down on a clean static free work surface.

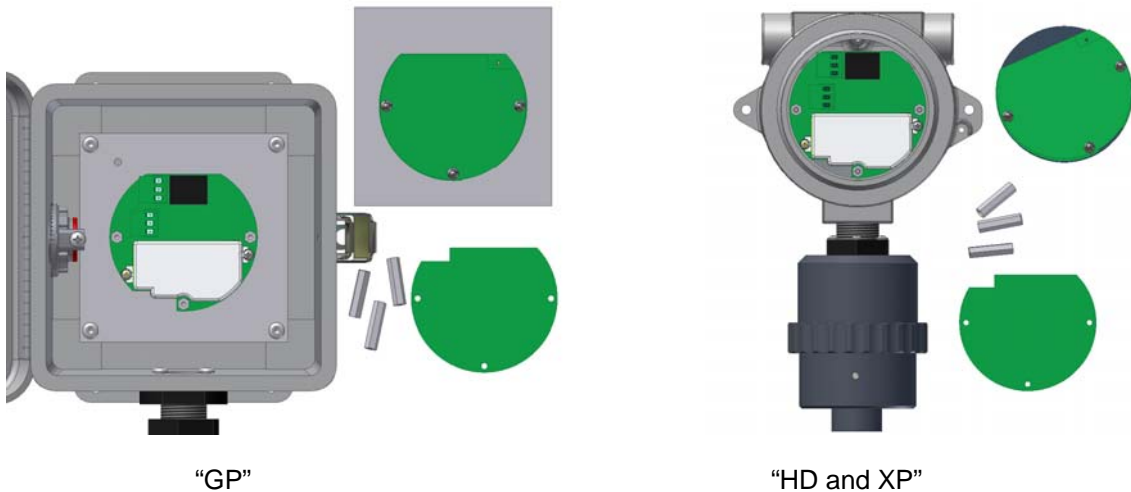


4. Remove the Banana Jacks from the Transmitter and remove the Dummy Card.  
(Note: If set screws remain with the Banana Jacks, remove and reinstall into the Hex Stand-offs).

## SensAlert Plus Relay Board

5. Place the Relay Board Card on to the Hex Stand-offs and gently couple the plug into the jack on the Power Supply Printed Circuit Board Assembly.

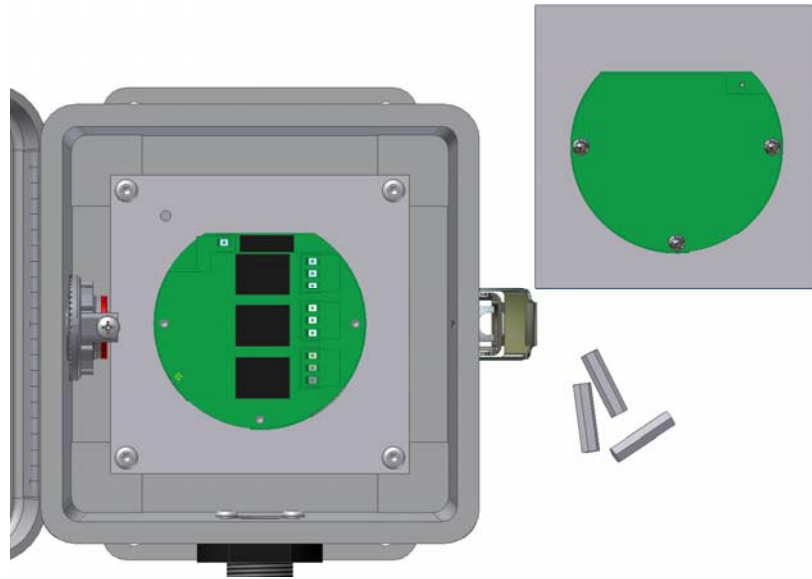

"GP"

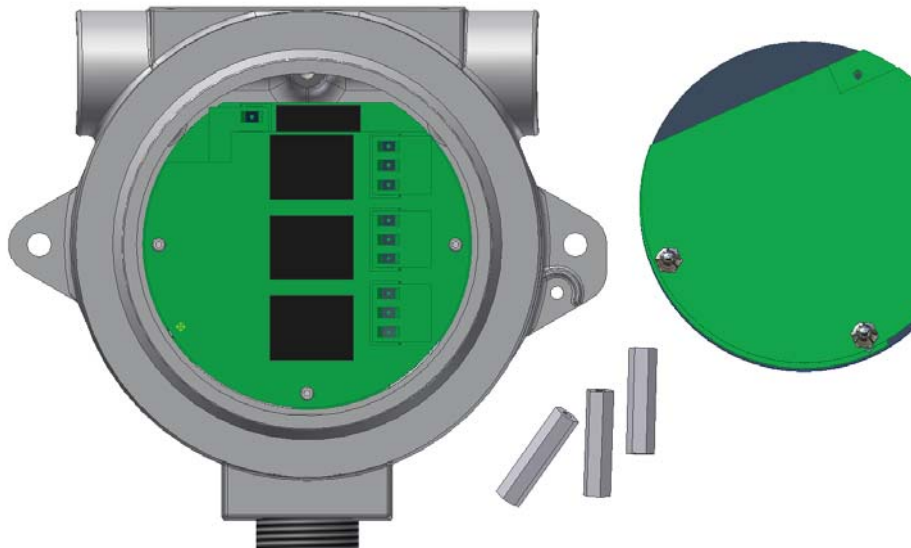

"HD and XP"

6. Install the Banana Jacks on to the Set Screws and tighten. Use two 1/4" wrenches to tighten.
7. Refer to SensAlert Plus User Manual (P/N 360-0087-02) for set-up.

***SENSIDYNE***<sup>®</sup>

Sensidyne, LP  
1000 112<sup>th</sup> Circle N, Suite 100  
St. Petersburg, Florida 33716 USA  
800-451-9444 • +1 727-530-3602 • +1 727-539-0550 [fax]  
web: [www.sensidyne.com](http://www.sensidyne.com) • e-mail: [info@sensidyne.com](mailto:info@sensidyne.com)

