


# Gilian<sup>®</sup>

## ***GILIBRATOR-2 BASE CONVERSION KIT***

***Document No. 360-0079-01***

***(Revision C)***

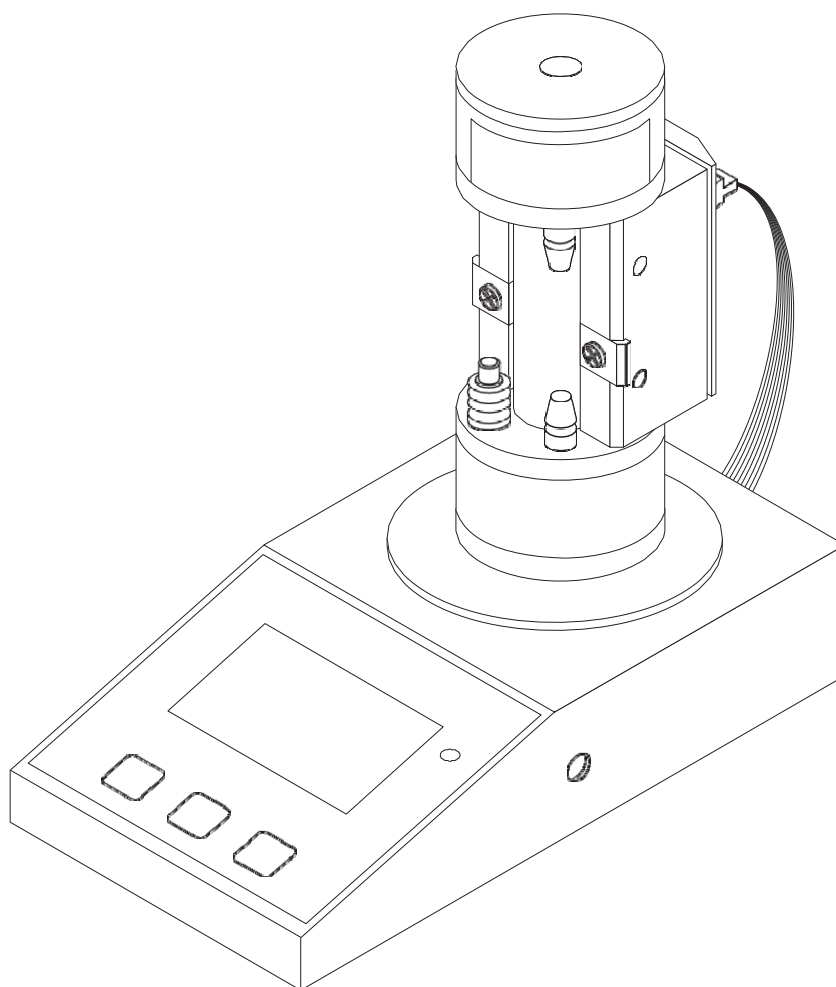

***SENSIDYNE<sup>®</sup>***

Sensidyne, LP

1000 112th Circle N, Suite 100

St. Petersburg, Florida 33716 USA

(800) 451-9444 • (727) 530-3602 • Fax: (727) 539-0550

web: [www.sensidyne.com](http://www.sensidyne.com) • e-mail: [info@sensidyne.com](mailto:info@sensidyne.com)

## Gilibrator base upgrade instruction to change Gilibrator 2 base to 9-pin version (850190-1)

|                        |                      |    |               |
|------------------------|----------------------|----|---------------|
| <b>Kit Components:</b> | Conductor cable      | PN | 850040-1-R    |
|                        | Foam tape, 2" length | PN | 566-0006-01-R |
|                        | Serialization label  | PN | 402101-1-R    |
|                        | Adaptor              | PN | 850216        |

### Rework procedure:

- Ensure proper ESD (electrostatic discharge) precautions are followed when handling these items.
- Remove bottom cover to access PCA.
- Remove 15-conductor cable. Add adaptor.
- Install 9-conductor cable.
- Apply 2-inch length of foam tape to protect the cable at enclosure exit.
- Identify new serialization label with existing serial number.
- Remove old label from unit and replace with new label.
- Re-assemble the enclosure.

### Test procedure: Retest per Procedure 7012985TP

